



Sony Handycam HDR-XR500V Door Replacement

These instructions will guide you to disassemble the cabinet door to access the speakers.

Written By: Amber Han





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Opening LCD screen



- Pull on tab away from the camera by applying pressure with index finger.

Step 2



- Remove the three 3mm Philips #00 screws.

Step 3



- Place the camera so that the strap is on the table and the lens is facing you.
- Lift up the Connector.
- Pull Back the Connector.
- Remove the Connector.

Step 4




- Turn the camera so that the screen tab is pointing towards you.
- Twist the tab clockwise one notch.
- Remove the 3mm Philips #00 screw.

Step 5



- Remove two 3mm Philips #00 screws on the control board.

Step 6

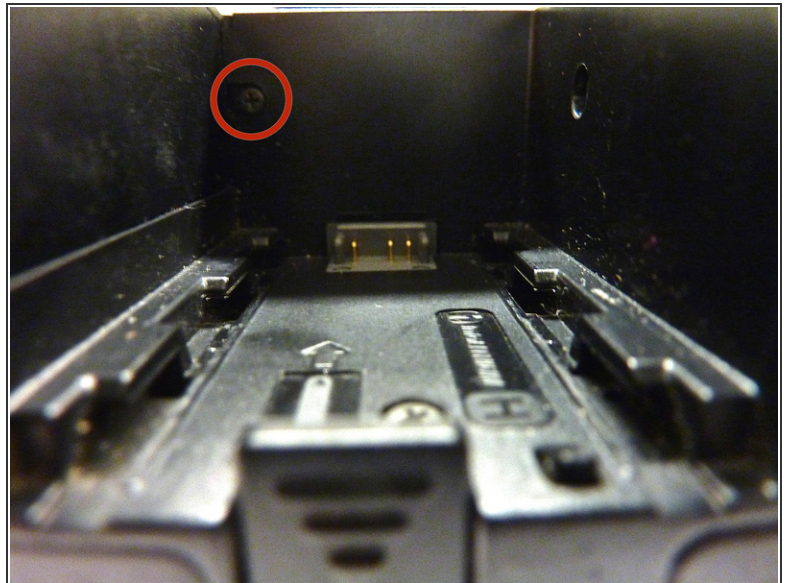

- Place the camera so that the lens is facing the bottom.
- The battery compartment should be facing you.
- Remove the 3mm Philips #00 screw.

Step 7




- Turn camera on its side, resting on the strap.
- The bottom of the camera should be facing you.
- Remove five 3mm Philips #00 screws.

Step 8




- Close the LCD screen door.
- Turn the camera to the eye piece and batter compartment is facing you.

Step 9

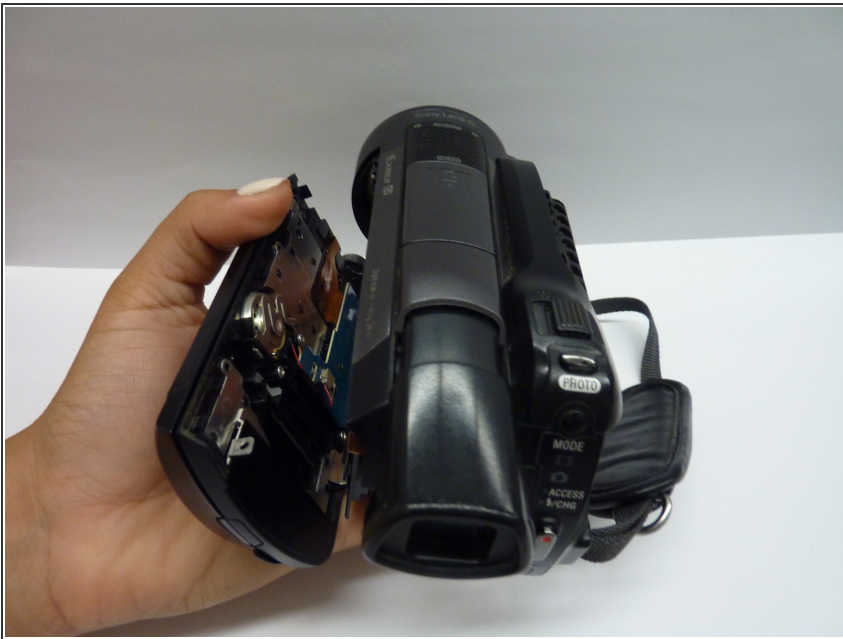

- Pull the entire cabinet panel away from camera.

Step 10

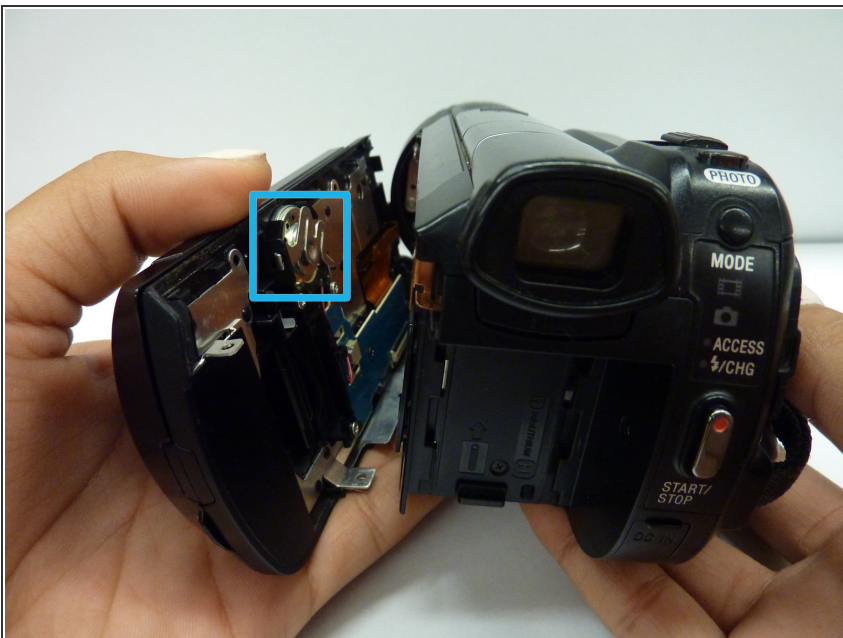

- You have disassembled the cabinet door and got to the speakers.
- ⓘ Do not try to pry off the entire door, it can remain slightly attached.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 04:49:03 PM.